

Using a GPS Receiver



Scroll Buttons - allow user to scroll up/down on a page

Enter Button - confirms entry

Power Button - turns receiver on/off

Page Button - allows user to switch between 4 main pages: satellite, pointer, map, and menu

Finding a Destination

- Press the power button
- Wait for the satellite signal (will say "ready to navigate")
- Press the Page button until you reach the Menu page
- Use the Scroll up/down buttons to highlight "Waypoints"
- Press Enter
- Choose the letter/number corresponding with your cache name/number using the scroll buttons
- Press Enter
- From this "Review Waypoint" page you can retrieve your geographical location (latitude/longitude)
- Scroll to select "GO TO"
- Press Enter
- Walk in the direction of the arrow (you must be moving to receive the precise direction)
- Arriving Destination will appear on the screen when you are close to your cache
- Repeat for next cache (your next stop is posted under the lid)

Notes

- The GPS receiver is only accurate to about 15 feet. When you are this close to your cache, you must LOOK for it!
- GPS direction/distance is "as the crow flies" it does not account for obstacles
- To use the receiver you must be outside with a clear view of the sky

